

SONY

5-045-568-11(1)



Interchangeable Lens Digital Camera

FX30

E-mount

Startup Guide



ILME-FX30

We use environmentally conscious packaging materials

Environmentally conscious packaging materials were used for the camera and supplied accessories.

Note the following due to the characteristics of the packaging materials.

- Powder, etc. from the packaging materials may adhere to the camera or supplied accessories. In this case, remove it with a commercially available blower or cleaning paper before use.
- The packaging materials will deteriorate with continuous use. Be careful when carrying the product by the packaging.

About the manual for this camera



"Help Guide" (Web manual)

https://rd1.sony.net/help/ilc/2220/h_zz/



ILME-FX30 Help Guide

This guide describes the necessary preparations to start using the product, basic operations, etc. For details, refer to the "Help Guide" (web manual).

Preparations

Checking the supplied items

The number in parentheses indicates the number of pieces.

- Camera (1)
- AC Adaptor (1)
The type of the AC Adaptor may differ depending on the country/region.
- Power cord (mains lead) (1)*
(supplied in some countries/regions)
* Multiple power cords may be supplied with this equipment. Use the appropriate one that matches your country/region. See "Notes on use."
- Rechargeable battery pack NP-FZ100 (1)
- USB Type-C® cable (1)
- XLR handle unit (1) (ILME-FX30 only)
- Body cap (1) (attached to the camera)
- Shoe cap (1) (attached to the camera)
- Handle shoe cap (1) (attached to the handle) (ILME-FX30 only)
- Startup Guide (this manual) (1)
- Reference Guide (1)


Charging the battery pack

1 Insert the battery pack into the camera.

- Open the battery cover, and then insert the battery pack while pressing the lock lever.


2 Turn the power off.

- If the camera is turned on, the battery pack will not be charged.

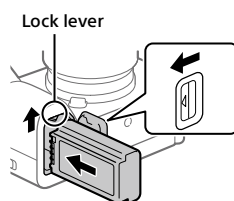


3 Connect the camera with the battery pack inserted to the AC Adaptor (supplied) using the USB cable (supplied), and connect the AC Adaptor to the wall outlet (wall socket).

- The charge lamp will light up when charging starts. When the charge lamp turns off, charging is completed.

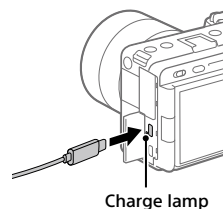

Inserting a memory card into the camera

You can use CFexpress Type A memory cards and SD memory cards with this camera.

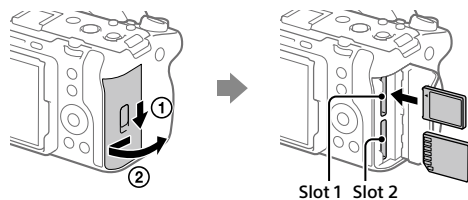


Open the memory card cover and insert the memory card into Slot 1.

- Both Slot 1 and Slot 2 support CFexpress Type A memory cards and SD memory cards.
- Insert a CFexpress Type A memory card with the label facing the monitor, and an SD memory card with the terminal facing the monitor. Insert the card until it clicks into place.
- You can change which memory card slot to use by selecting MENU → [Shooting] → [Media] → [Rec. Media Settings] → [Recording Media] or [Recording Media]. The Slot 1 is used in the default settings.

Hint

- When you use a memory card with the camera for the first time, it is recommended that you format the card on the camera for more stable performance of the memory card.

Attaching a lens

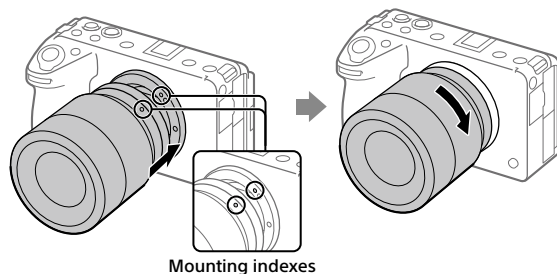

1 Remove the body cap from the camera and the rear lens cap from the rear of the lens.

2 Mount the lens by aligning the two white index marks (mounting indexes) on the lens and camera.


3 While pushing the lens lightly toward the camera, turn the lens slowly in the direction of the arrow until it clicks into the locked position.

Attaching the XLR handle unit (supplied) (ILME-FX30 only)


By attaching the XLR handle unit, up to four audio devices can be connected to the camera simultaneously.

1 Remove the shoe cap from the camera and the handle shoe cap from the XLR handle unit.

2 Slide the XLR handle unit into the Multi Interface Shoe until it reaches the back of the shoe. Then, be sure to securely tighten the screws on either side using a coin, etc.

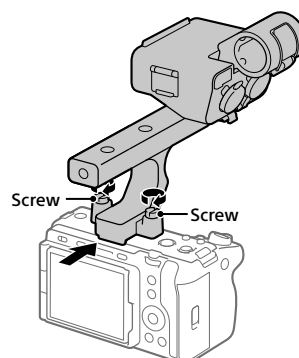


Turning the power on and setting the language and area

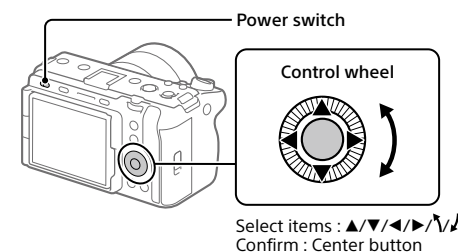

- 1 Set the power switch to "I" (On) to turn on the camera.
- 2 Press the top/bottom/left/right side of the control wheel to select the desired language and the area where the camera will be used, and then press the center of the control wheel.
- 3 Follow the instructions on the screen to apply the initial settings.


Setting the date and time

- 1 Press the MENU button to display the menu screen.
- 2 Press the top/bottom/left/right side of the control wheel to select [Setup] → [Area/Date] → [Area/Date/Time Setting] → [Date/Time], and then press the center of the control wheel.
- 3 Set the date and time, and then press the center.

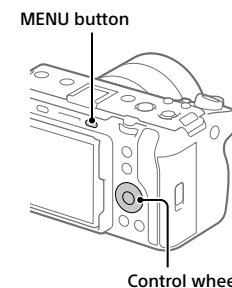

Shooting

Shooting movies

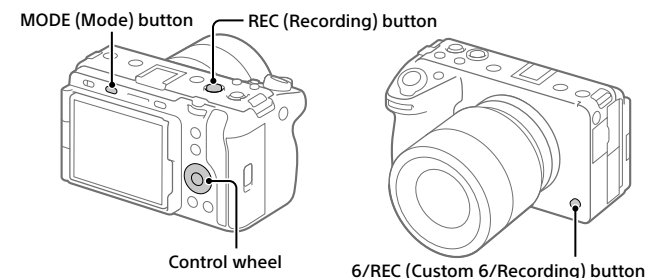

- 1 Press the MODE (Mode) button, use the control wheel to select [Movie], and then press the center.
- 2 Press the REC (Recording) button to start recording.
Movie recording can be started from any shooting mode in the default setting.
- 3 Press the REC button again to stop recording.

Shooting still images

- 1 Press the MODE (Mode) button, use the control wheel to select the desired shooting mode, and then press the center of the control wheel.
- 2 Press the shutter button halfway down to focus.
- 3 Press the shutter button all the way down.

